



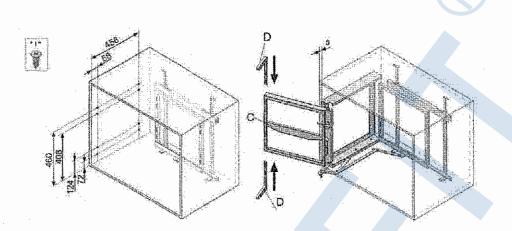


5. Assemble the door connectors "D" with the side frame "C". Mark the place of the holes to fix the side frame "C" to the cabinet, and fix them.



6. Fix the articulated arm "F" to the frames "A" y "C", as we show.

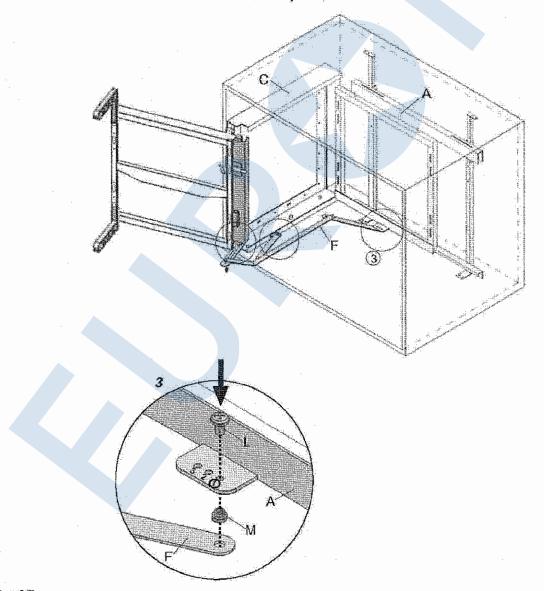





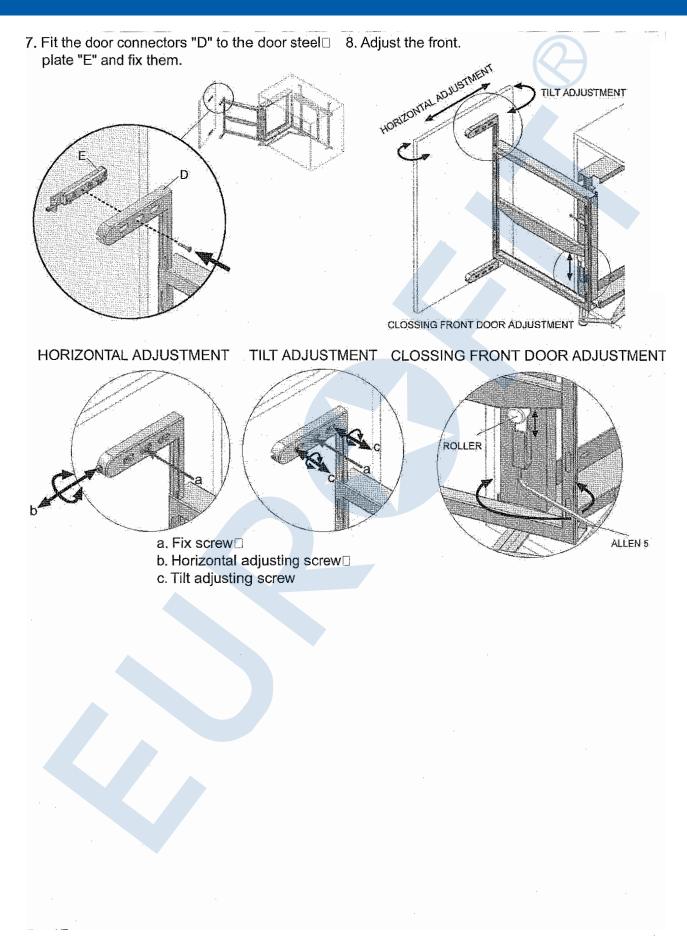





1. Assemble the adjustable rod "B" to the back frame "A".

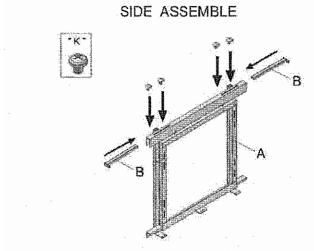

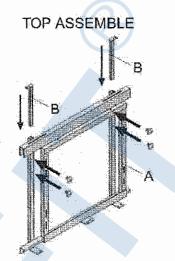



2. Fix the back frame "A" to the cabinet, according to the dimensions.

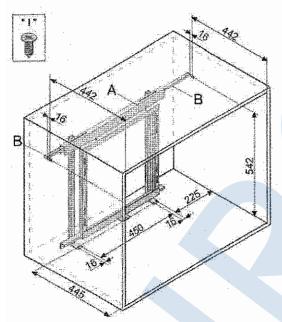

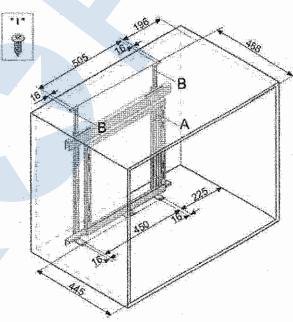


Screw the door steel plates "E" to the front. 4. Mount the articulated arm "F", according to the drawing.

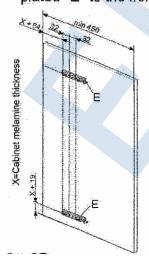

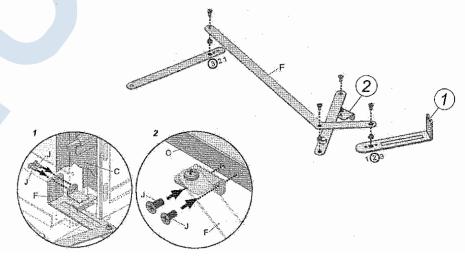




5. Assemble the door connectors "D" with the side frame "C".Mark the place of the holes to fix the side frame "C" to the cabinet, and fix them.

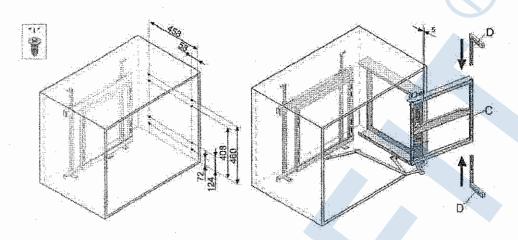

6. Fix the articulated arm "F" to the frames "A" y "C", as we show.

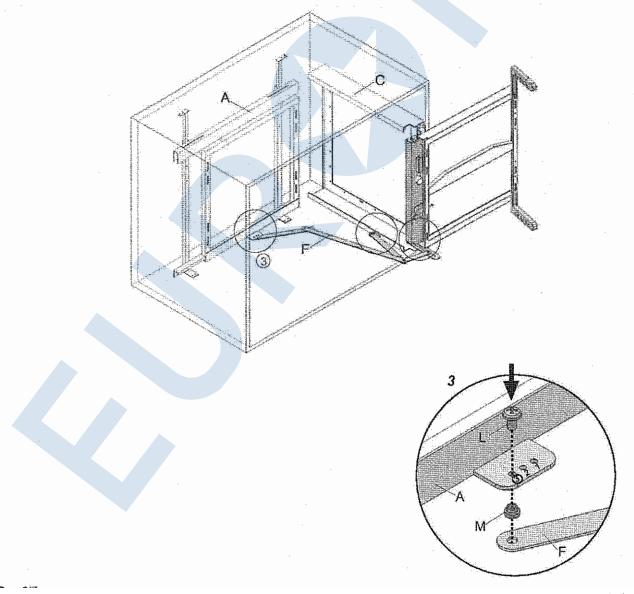





7. Fit the door connectors "D" to the door steel 8. Adjust the front. plate "E" and fix them.

TILT ADJUSTMENT

HORIZONTAL ADJUSTMENT TILT ADJUSTMENT CLOSSING FRONT DOOR ADJUSTMENT

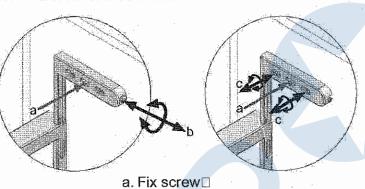

- b. Horizontal adjusting screw□
- c. Tilt adjusting screw

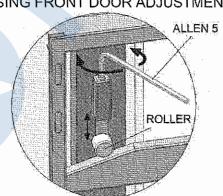

CLOSSING FRONT DOOR ADJUSTMENT