


### INSTALLATION

1. IF THE STANDARD **CABISEAL** CUT OUT HAS NOT BEEN ADDED TO CNC PRODUCTION USE TEMPLATE FOR MANUAL POSITIONING FOR MORE INFORMATION CONTACT HARP INDUSTRIES

2. AFTER DISHWASHER HAS BEEN PLUMBED FIX THE SMALLER BACK PLATE IN PLACE WITH THE PROVIDED SCREWS

3. ENSURE DISHWASHER HOSES AND LEAD ARE APPROPRIATELY PLACED BEFORE SECURING THE SELF LOCATING FRONT PLATE

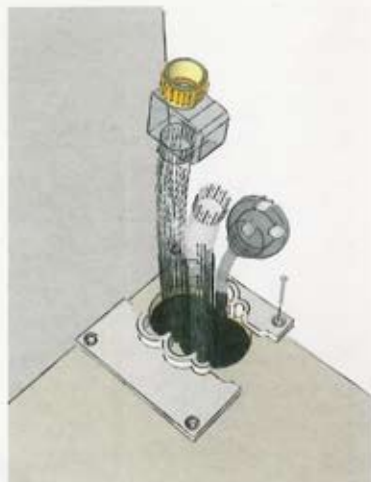

VISIT OUR WEBSITE AT [WWW.HARPINDUSTRIES.COM.AU](http://WWW.HARPINDUSTRIES.COM.AU) FOR MORE INFORMATION


**CABISEAL** IS PROUDLY AUSTRALIAN MADE FROM HIGH QUALITY CHEMICAL RESISTANT ABS PLASTIC.

PROVIDED SCREWS ARE FOR STANDARD 16MM SUBSTRATES. PLEASE INQUIRE WITH VENDOR AS TO THE SUITABILITY WHEN RETROFITTING

### DRILLING TEMPLATE

L/H INSTALLATION

R/H INSTALLATION

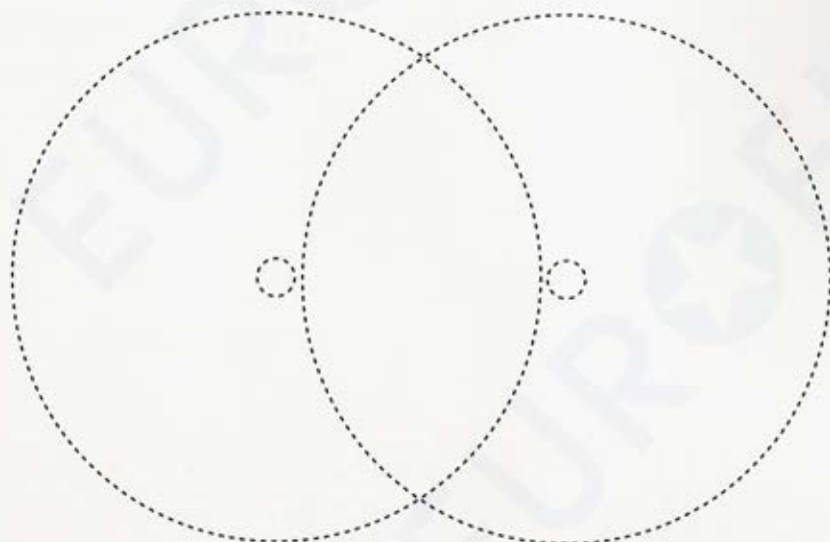

BACK OF CABINET