

Fastcap Peel & Stick Edgebanding Tape (EPG-Fastedge-White) **EUROFIT®**



Peel & Stick Edgebanding ...that sticks

STOP
READ INSTRUCTIONS

A QUICK MESSAGE ABOUT FASTEDGE FROM PAUL

dbc
MADE IN THE USA
ULTRA BOND
UNLIMITED LIFETIME WARRANTY

Instructions For Use

- Make sure surface is clean
- Apply pressure (SpeedRollerPRO recommended)
- Instant adhesion, wait 24 hours for full cure

Instructions For Finishing Applied Material

- Apply stains/finishes lightly/fog coat to applied material DO NOT over saturate! This will cause the solvents to leach under the material and attack the adhesive

Applying Fastedge to MDF

A binder coat for loose particulate in MDF is needed. We recommend applying a diluted coat of 50% contact cement and 50% lacquer thinner to MDF material. Roll on the solution and let stand 10 minutes before applying Fastedge.

Using Edgebanding on a Radius

It's helpful to use a heat gun to relax the memory of any wood or PVC material.


Flattening Fastedge

Watch the video →

- Flattening FastEdge helps eliminate chances of material peeling up on the ends.



Cut Fastedge to the approximate length.

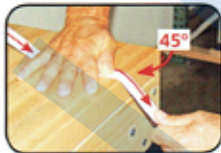

Pull across edge of table through at 45°



Flat and ready to apply.

Finishing Fastedge

Watch the video →

- Only finish Fastedge once it has been applied.
- Apply stains and finishes lightly in a fog coat
- **DO NOT OVER SATURATE!** This will cause the solvents to leach through the material and attack the adhesive.
- After two fog coats, the wood is sealed and a heavy saturating coat can be applied without damaging the adhesive.



Applying Fastedge

Watch the video →

- Make sure surface is clean...no dust!
- Remove liner and apply Fastedge
- Trim ends with Flush Cut Trimmers
- Roll vigorously with SpeedRoller PRO
- Trim edges with the QuadTrimmer PRO
- Instant adhesion, full cure in 24 hours

